


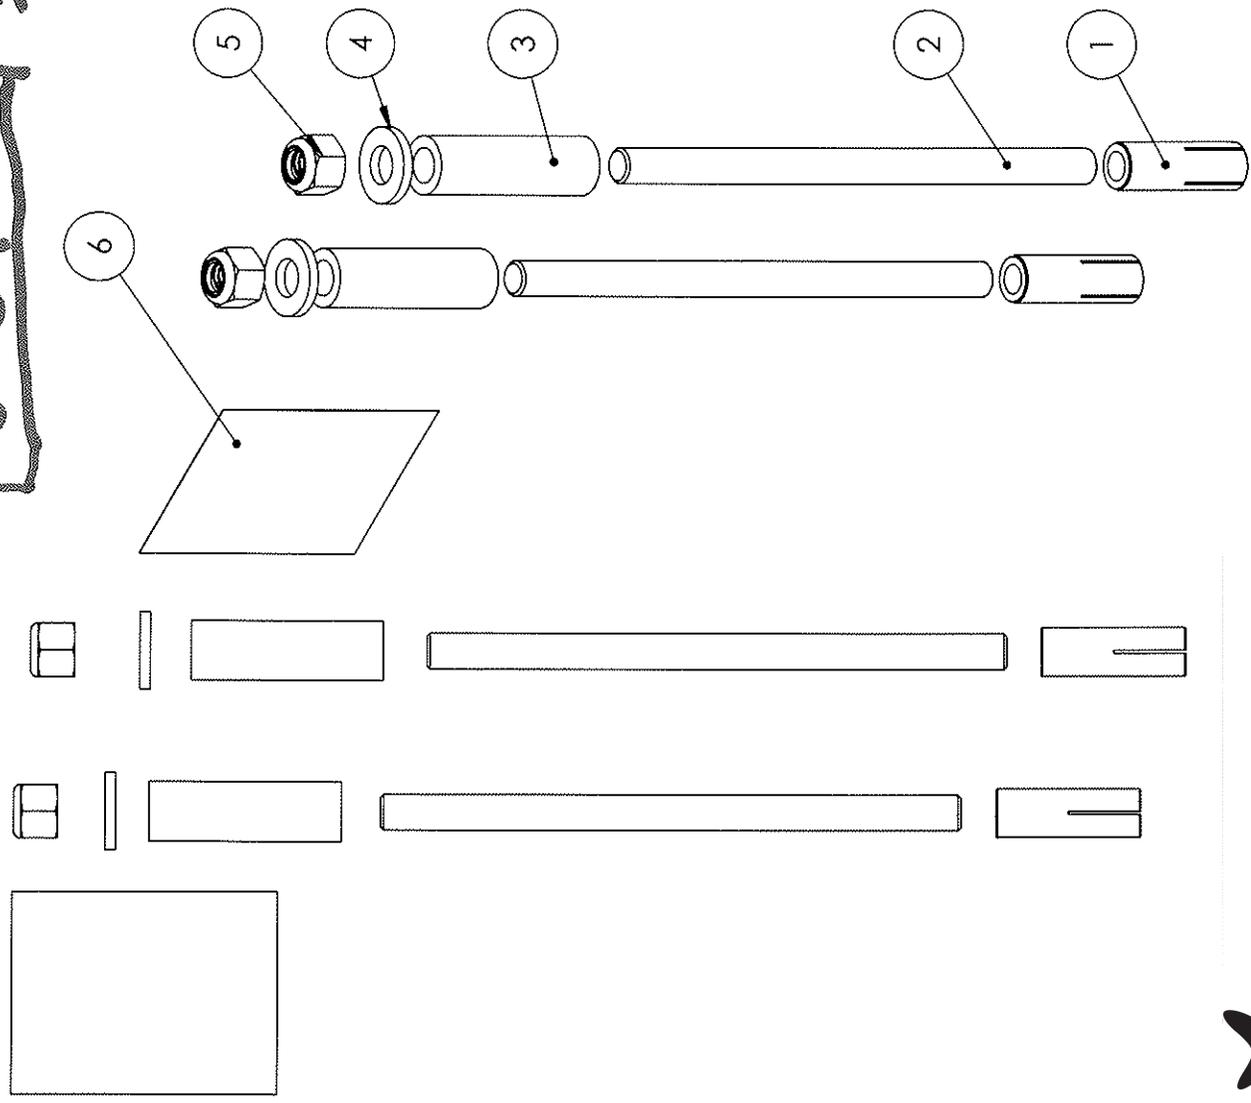

Grid Seat Bench Installation Instructions - UCFM

UC FM KIT

| ITEM NO. | PART NUMBER | QTY. |
|----------|---|------|
| 1 | UC.ANCHR - Concrete Anchor - Grid Bench | 2 |
| 2 | UC.THDRD - 6in Threaded Rod - Grid Bench | 2 |
| 3 | UC.SPCR - EPDM Rubber Spacer - Grid Bench | 2 |
| 5 | UC.NUT - Nylon-Lock Nut - 95615A140 | 2 |
| 6 | UC.FM-Instructions | 1 |



NOTES:

1. PARTS SHOWN ARE ASSEMBLED FOR SHIPPING PRIOR TO INSTALLATION LOCATE BENCH OR BENCHES IN DESIRED POSITIONS MARK FLOOR FOR LEG LOCATIONS
2. DISASSEMBLE THE LEGS FROM THE BENCH UNIT PLACE THE BENCH ASSEMBLY WITH LEGS REMOVED ON PROTECTIVE MATERIAL
3. SET LEG ASSEMBLIES BACK IN MARKED POSITION, ONCE IN PLACE TAKE A MARKER AND MARK THE HOLE POSITION INSIDE THE LEG ON THE FLOOR
4. INSTALL ITEM 1 USING 1/2" CONCRETE DRILL BIT AND SETTING TOOL
5. ITEM 2 IS INSTALLED IN ANCHOR AFTER SETTING ANCHOR
6. INSTALL ITEM 5 SPACER OVER THREADED ROD PLACE LEG ASSEMBLY OVER THREADED ROD
7. PLACE ITEM 3 WASHER OVER THREADED ROD INSIDE LEG ASSEMBLY
8. INSTALL ITEM 4 NYLON-LOCK NUT OVER THREADED ROD
9. USING A 9/16 DEEP SOCKET WITH 12" EXTENSION TIGHTEN ASSEMBLY
10. RECONNECT THE LEGS TO THE BENCH ASSEMBLY



| | |
|--|---------------------|
| Description: FLOOR ANCHOR KIT - GRID BENCH | |
| Drawn by: JW | Date: 10/25/12 |
| Checked by: JNTS | Drawn by: UC FM |
| Scale: 1 of 1 | REV: A |
| By: JW | Date: 10/25/12 |
| Material: SEE NOTES | Material: SEE NOTES |